


2

WAYS TO PAY

Get off to a
great start
by following
our guide

JLA

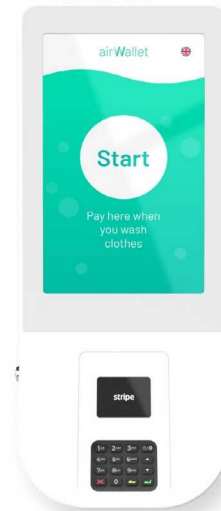

1

Cashless payment terminal

1. Put the laundry in the machine, close the door and select the program. Head over to the payment terminal, press start and select the machine you have booked or want to start.
2. Swipe to pay for your laundry by contactless payment or with Chip+PIN. The terminal accepts all the major debit and credit card brands
3. Start the program on the machine

2

App

1. Download the Airwallet app from your smartphone
2. Create an account by entering your name, phone number, and selecting a memorable PIN code and then enter a 6-digit one-time code that you will receive in an SMS
3. Add a valid payment method Airwallet accepts Visa, MasterCard, Maestro, Apple Pay and Google Pay
4. When you get to the laundry room click the "I'm in the laundry" button to link your account to the laundry room
5. Put the laundry in the machine, close the door and select the program. Open the Airwallet app and select the machine you have booked or want to start. Swipe to pay and then start the program on the machine

