

Dryer Instructions – JLA 98

Do not overload the dryer. Leave plenty of room for the air to circulate.
Do not dry wool, rubber or plastic.

Loading



Open the door and clean the lint filter

Starting



Press 'START' to commence the cycle.
The cycle time is displayed



Load the dryer



To check if items are dry you can open the door but only for a very short time, to carry on drying shut the door and press 'START' again

Selecting Programme



Select the Cycle

Unloading



When the cycle ends, open the door and unload the dryer

**To report any issues please contact
WCHG on 0300 111 0000 and provide the
machine number**