

Washing Instructions – JLA 98

Do not overload the washer. Leave plenty of room for water

Loading



Open the door and load the washer until the drum is 3/4 full

Starting



Select 'HEAVY SOILING' if required

Adding Detergents



Add the detergent and conditioner. If using tablets, these must be placed directly into the drum



Press Start, and the cycle time will be displayed

Selecting Programme



Select the cycle

Unloading



When the cycle ends, open the door and unload the washer

**To report any issues please contact WCHG
on 0300 111 0000 and provide the
machine number**